

Hinto

USER GUIDE

 




CONTENTS

1. GETTING STARTED	3	
1.1 Inserting a SIM card		3
1.2 Inserting the battery		4
1.3 Charging the telephone		5
1.4 Switching on the telephone		5
1.5 Using the keypad		6
1.6 Understanding the battery charge level		7
2. GENERAL USAGE	7	
2.1 Making a call		7
2.2 Viewing your call history		9
2.3 Writing a text message		10
2.4 Adding a contact		11
2.5 Using the loudspeaker		12
2.6 Locking the telephone		12
3. SETTINGS		13
3.1 Choosing a language		13
3.2 Setting a ringtone	14	
3.3 Choosing a wallpaper	15	
3.4 Restore default settings	16	


1. GETTING STARTED

Firstly, make sure your telephone is switched off. If it is not, press and hold the  key to switch it off.


1.1 Inserting a SIM card

Remove the battery.

 Insert a MicroSIM card as shown on the image below.

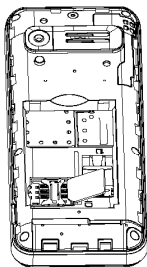

 PLEASE NOTE: If you have a NanoSIM card, you will need to use a MicroSIM adapter.

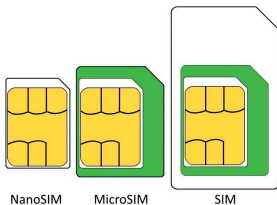


NanoSIM

MicroSIM


SIM

1.2 Inserting the battery

 Remove the rear cover.

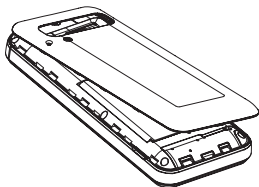


Position the battery as shown below.

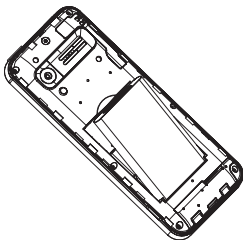 


Refit the rear cover.

1.3 Charging the telephone

 
Use the supplied charger to charge the telephone.

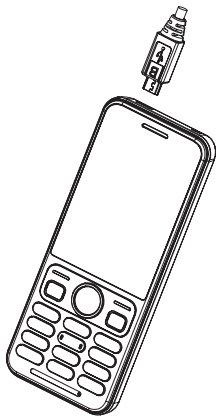

1.4 Switching on the telephone

Press and hold the  key to switch on your telephone.

 1.5 Using the keypad

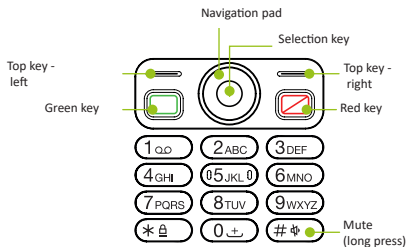

Press the selection key to view the menus.



Use the navigation pad to scroll through the menus.





1.6 Understanding the battery charge level

To view the battery charge level, look at the battery icon in the bottom right-hand corner.

The telephone will display a message on the screen if the battery charge level is low.

Place the telephone in its cradle to charge.

2. GENERAL USAGE

2.1 Making a call

To make a call, enter the number you want to call directly on the keypad or select a contact from the **Telephone** list.

Use the left and right buttons on the navigation pad to adjust the volume during a call.

2.1.1 Enter a number

 
To make a call, enter a number and press the  key.

While you are entering a number, it will appear in the suggestions bar if it has already been saved on your phone.


Use the navigation pad to select the number.




2.1.2 Call a contact

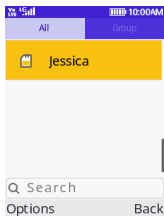


  Press the top right key from the home screen. Select a contact.

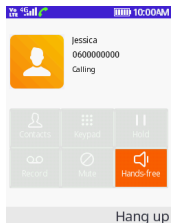


Press the  key to call.

 2.2 Viewing your call history

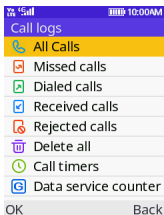

 
Select **All calls** to view your full call history.

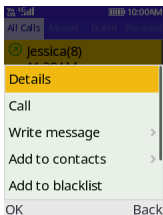


To view the call details, select a call using the navigation pad and press on the top left key.

Then select **Details**.

 2.3 Writing a text message

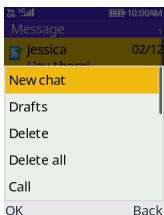

 
Press the top left key, then select **New chat**.

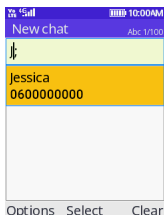

Enter the number or name of the person you want to text if it is saved in your **Contacts** list.




 Type your message.

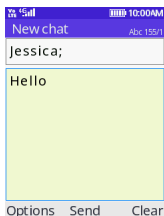


Press the selection key **Send** in the menu.

 
2.4 Adding a contact

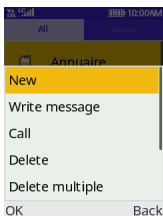

 Press the top left key and select **New**.

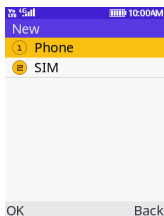


Select storage location.

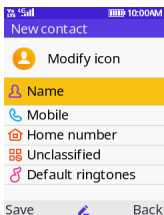 

Fill in the form.
Press the top left key to save.

 2.5 Using the loudspeaker

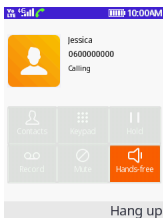

During a call, press the top right key to activate the **hands-free** function.

Press again to stop using the loudspeaker.

 
2.6 Locking the telephone

To lock your telephone, press the padlock key and select Lock using the top left key.


Press the top left key and the padlock key to unlock your phone.

3. SETTINGS


3.1 Choosing a language

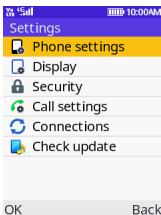

Select **Telephone settings**.

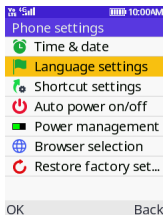 


Select **Language settings**.

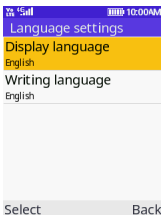 


Select **Display language** then select your language from the list.

 
3.2 Setting a ringtone

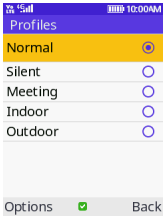

 
From the home screen, press the right-hand section of the navigation pad.

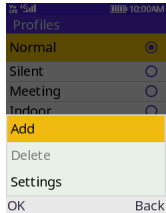

 Press the top left key to view **Options** and select **Settings**.

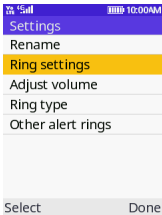


Select **Ringtone settings**.

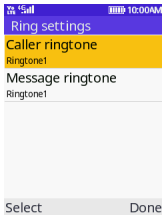 


Press the top left key and select device **Ringtones** to access the list.

Choose a ringtone from the list and press the top left key to confirm.

 
3.3 Choosing a wallpaper

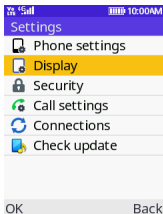


Select **Display** from the menus.

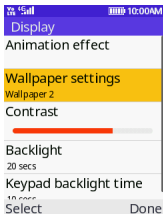 

Select **Wallpaper settings**.

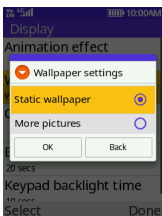 


Select **Static wallpaper**.

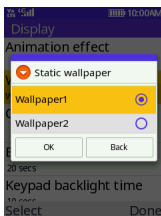 


Select an image from the list.

 
3.4 Restore default settings

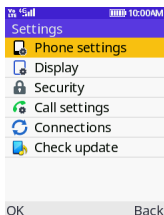


Select **Telephone settings**.

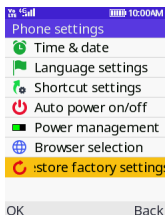 

Select **Restore settings**.

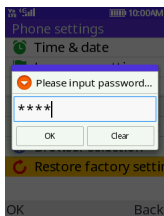 

Enter **1234** for the password.

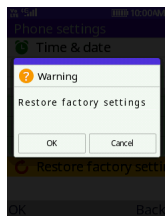 

Press the top left key to restore default settings.



MobiWire

www.mobiwire.com