

Hinto 2


USER GUIDE






CONTENTS

1. GETTING STARTED	3
1.1 Inserting a SIM card	3
1.2 Inserting the battery	4
1.3 Charging the telephone	5
1.4 Switching on the telephone	5
1.5 Using the keypad	6
1.6 Understanding the battery charge level	7
2. GENERAL USAGE	7
2.1 Making a call	7
2.2 Viewing your call history	9
2.3 Writing a text message	10
2.4 Adding a contact	11
2.5 Using the loudspeaker	12
2.6 Locking the telephone	12
3. SETTINGS	13
3.1 Choosing a language	13
3.2 Setting a ringtone	14
3.3 Choosing a wallpaper	15
3.4 Restore default settings	16
4. ACCESSIBILITY	17
4.1 Make texts bigger	17
4.2 Adjust display brightness	18



 
1. GETTING STARTED

Firstly, make sure your telephone is switched off. If it is not, press and hold the  key to switch it off.


1.1 Inserting a SIM card

Remove the battery.

Insert a MicroSIM card as shown on the image below.

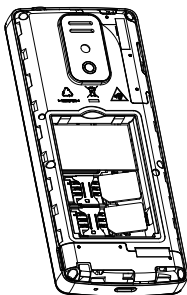


PLEASE NOTE: If you have a NanoSIM card, you will need to use a MicroSIM adapter.

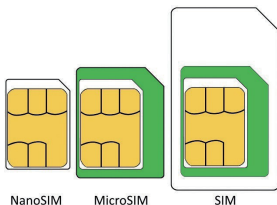


1.2 Inserting the battery

Remove the rear cover.

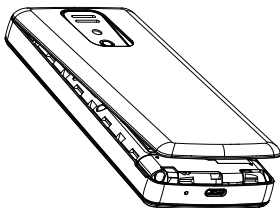


Position the battery as shown below.

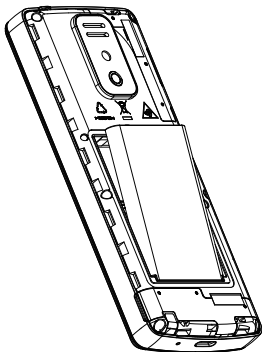


Refit the rear cover.

1.3 Charging the telephone


Use the supplied charger to charge the telephone.

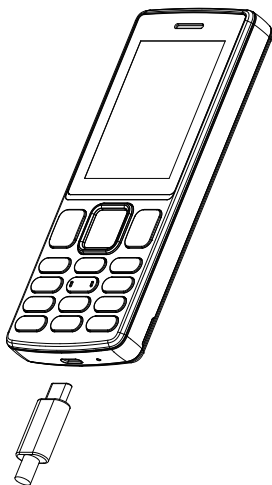

1.4 Switching on the telephone

Press and hold the  key to switch on your telephone.

1.5 Using the keypad

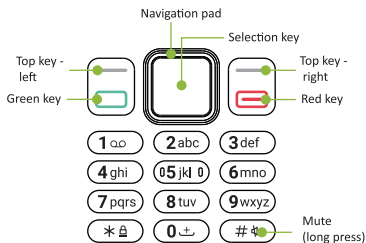

Press the selection key to view the menus.



Use the navigation pad to scroll through the menus.





1.6 Understanding the battery charge level

To view the battery charge level, look at the battery icon in the bottom right-hand corner.

The telephone will display a message on the screen if the battery charge level is low.

2. GENERAL USAGE

2.1 Making a call

To make a call, enter the number you want to call directly on the keypad or select a contact from the **Telephone** list.

Use the up and down buttons on the navigation pad to adjust the volume during a call.

2.1.1 Enter a number



To make a call, enter a number and press the  key.

While you are entering a number, it will appear in the suggestions bar if it has already been saved on your phone.


Use the navigation pad to select the number.



2.1.2 Call a contact

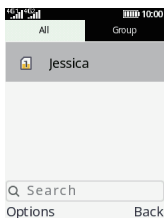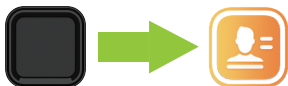


Press the top right key from the home screen. Select a contact.

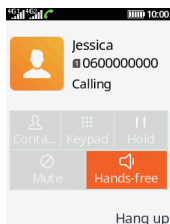


Press the  key to call.

2.2 Viewing your call history

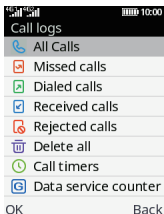


Select **All calls** to view your full call history.

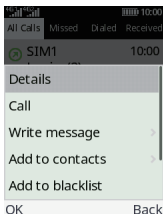


To view the call details, select a call using the navigation pad and press on the top left key.

Then select **Details**.


2.3 Writing a text message

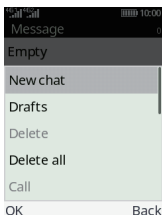


Press the top left key, then select **New chat**.

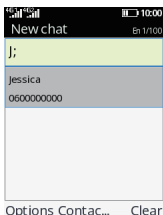

Enter the number or name of the person you want to text if it is saved in your **Contacts** list.

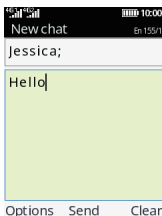


Type your message.

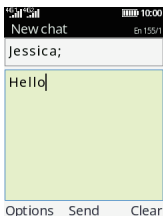


Press the selection key **Send** in the menu.


2.4 Adding a contact

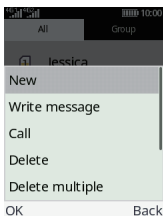

Press the top left key and select **New**.

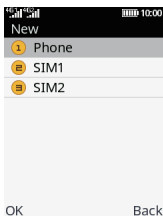


Select storage location.

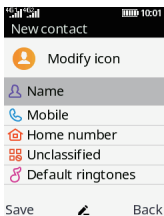

Fill in the form.
Press the top left key to save.

2.5 Using the loudspeaker

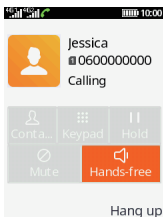

During a call, press the top right key to activate the **hands-free** function.
Press again to stop using the loudspeaker.

2.6 Locking the telephone


To lock your telephone, long press the padlock key.

Press the top left key and the padlock key to unlock your phone.


User can set the phonelock in settings->Security->phone locked

3. SETTINGS


3.1 Choosing a language

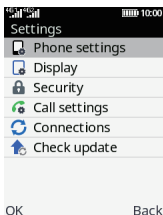

Select **Phone settings**.

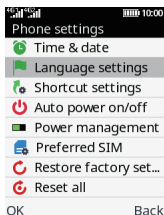


Select **Language settings**.

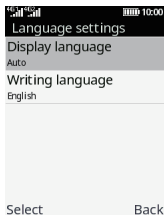


Select **Display language** then select your language from the list.


3.2 Setting a ringtone

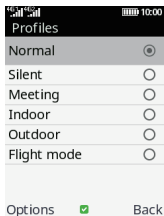


From the home screen, press the right-hand section of the navigation pad.

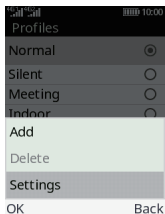

Press the top left key to view **Options** and select **Settings**.

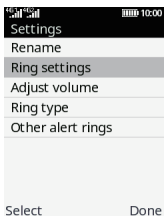


Select **Ringtone settings**.

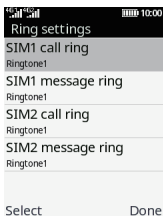


Press the top left key and select device **Ringtones** to access the list.

Choose a ringtone from the list and press the top left key to confirm.


3.3 Choosing a wallpaper

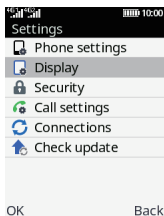


Select **Display** from the menus.

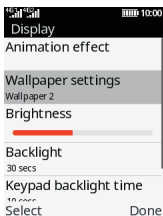

Select **Wallpaper settings**.


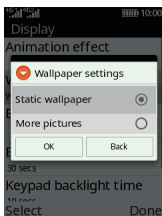


Select **Static wallpaper**.

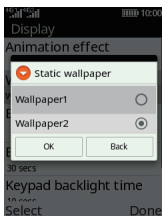

Select an image from the list.


3.4 Restore default settings

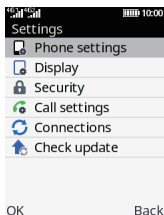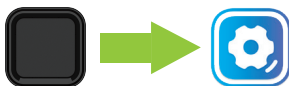

Select **Phone settings**.



Select **Reset all**.

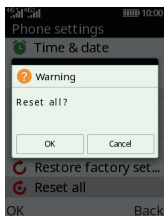


Press the top left key to restore default settings.

4. ACCESSIBILITY

4.1 Make texts bigger

You can adjust the text size to be larger.

 
1. Press **Menu > Settings > Display > Font size.**
2. Set the font size from Normal to **Big** and press OK, then press the top right soft key to save.

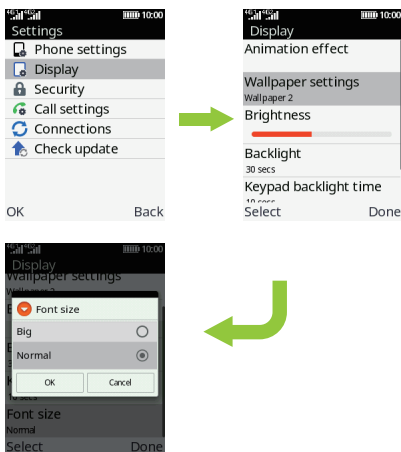

4.2 Adjust display brightness

You can adjust the brightness of the display.

1. Press **Menu > Settings > Display > Brightness**.
2. Adjust the brightness by using the left and right navigation keys and press the top right soft key when done.

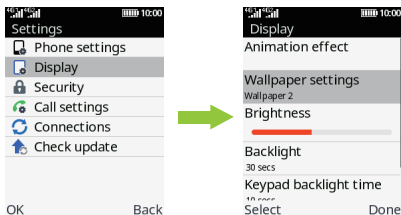



MobiWire

www.mobiwire.com