

# Yepa 2


## USER GUIDE






# CONTENTS

<b>1. GETTING STARTED</b>	<b>3</b>
1.1 Inserting a SIM card	3
1.2 Inserting the battery	4
1.3 Charging the telephone	5
1.4 Switching on the telephone	5
1.5 Using the keypad	6
1.6 Understanding the battery charge level	7
<b>2. GENERAL USAGE</b>	<b>7</b>
2.1 Making a call	7
2.2 Viewing your call history	9
2.3 Writing a text message	10
2.4 Adding a contact	11
2.5 Using the loudspeaker	12
2.6 Locking the telephone	12
<b>3. SETTINGS</b>	<b>13</b>
3.1 Choosing a language	13
3.2 Setting a ringtone	14
3.3 Choosing a wallpaper	15
3.4 Restore default settings	16
<b>4. ACCESSIBILITY</b>	<b>17</b>
4.1 Make the text bigger	17
4.2 Adjust the display brighter	18



 
# 1. GETTING STARTED

Firstly, make sure your telephone is switched off. If it is not, press and hold the  key to switch it off.

## 1.1 Inserting a SIM card


Remove the battery.

Insert a NanoSIM card as shown on the image.

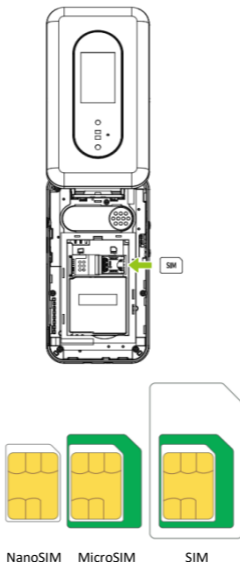

## 1.2 Inserting the battery

 Remove the rear cover.

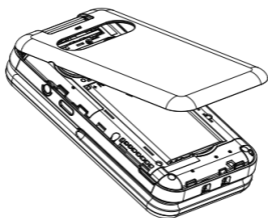


Position the battery as shown below.




Refit the rear cover.

## 1.3 Charging the telephone

 
Use the supplied charger to charge the telephone.

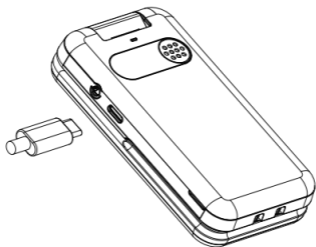

## 1.4 Switching on the telephone

Press and hold the  key to switch on your telephone.
 
## 1.5 Using the keypad

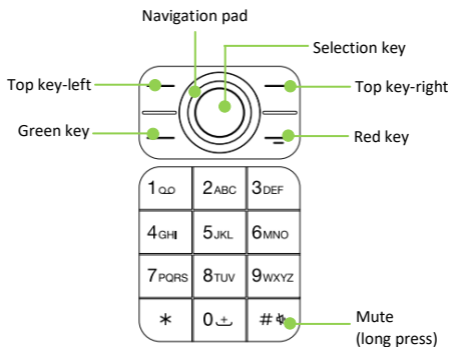

Press the selection l

nus.



Use the navigation pad to scroll through the menus.



## 1.6 Understanding the battery charge level

To view the battery charge level, look at the battery icon in the up right-hand corner.

The telephone will display a message on the screen if the battery charge level is low.


## 2. GENERAL USAGE

### 2.1 Making a call

To make a call, enter the number you want to call directly on the keypad or select a contact from the **Contact** list.

Use the up and down buttons on the navigation pad to adjust the volume during a call.

 
#### 2.1.1 Dial a number

To make a call, dial a number and press the  key.


When dialing a number, it will appear in the suggestions bar if it has already been saved on your phone.


Use the navigation pad to select the number.

## 2.1.2 Call a contact

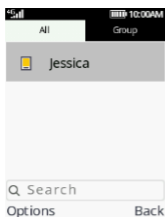

  
Press the top right key from the home screen.  
Select a contact.

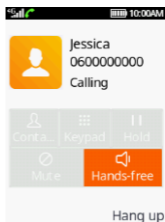


Press the  key to call.



## 2.2 Viewing your call history

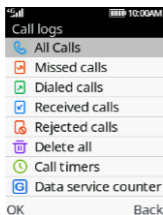 


 Select **All calls** to view your full call history.

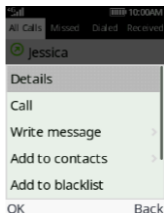


To view the call details, select a call using the navigation pad and press on the top left key. Then select **Details**.


## 2.3 Writing a text message

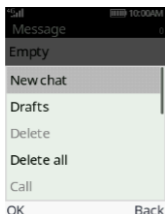 

 
Press the top left key, then select **New chat**.

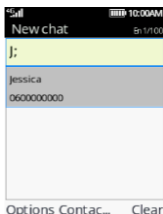

 Enter the number or name of the person you want to text if it is saved in your **Contacts** list.

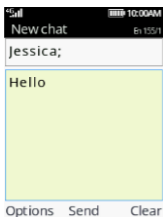


Type your message.

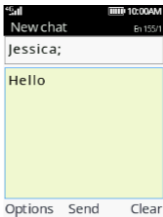 


Press the selection key **Send** in the menu.


## 2.4 Adding a contact

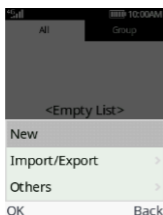 

 Press the top left key and select **New**.

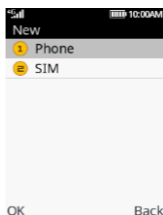


Select storage location.

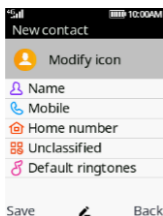 

Fill in the form.  
Press the top left key to save.

## 2.5 Using the loudspeaker


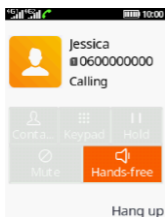 


During a call, press the top right key to activate the **hands-free** function.

Press again to stop using the loudspeaker.


## 2.6 Locking the telephone

  User can set the phonelock in **Settings->Security->Phone locked**, then close the cover and lock it or automatically turn off the screen and lock it.

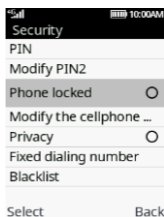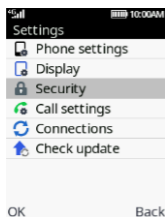


## 3. SETTINGS

 
### 3.1 Choosing a language

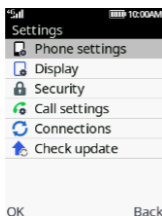

Select **Phone settings**.

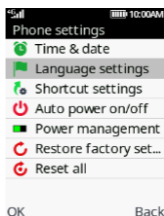 


Select **Language settings**.

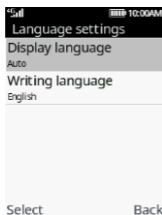 


Select **Display language** then select your language from the list.


## 3.2 Setting a ringtone

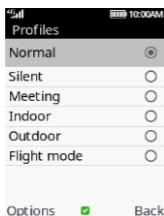 

 
From the home screen, press the right-hand section of the navigation pad.

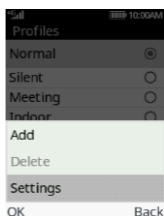

 Press the top left key to view **Options** and select **Settings**.

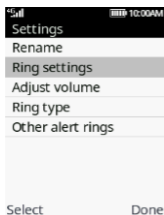


Select **Ringtone** settings.

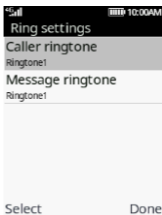 


Press the top left key and select device **Ringtones** to access the list.

Choose a ringtone from the list and press the top left key to confirm.


### 3.3 Choosing a wallpaper

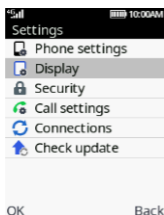 


Select **Display** from the menus.

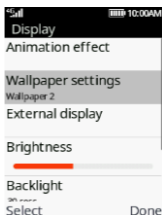 

Select **Wallpaper settings**.

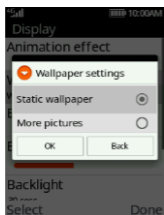 


Select **Static wallpaper**.

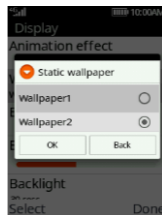 


Select an image from the list.


### 3.4 Restore default settings

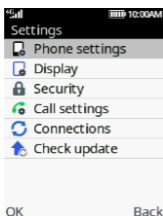 

Select **Phone settings**.

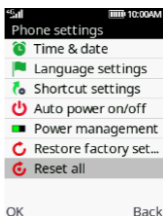 

Select **Reset all**.

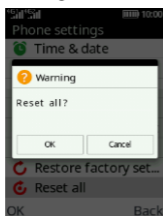 

Press the top left key to restore default settings.





## 4. ACCESSIBILITY
  
### 4.1 Make texts bigger

You can adjust the text size to be larger.



1. Press **Menu > Settings > Display > Font size.**
2. Set the font size from Normal to **Big** and press OK, then press the top right soft key to save.

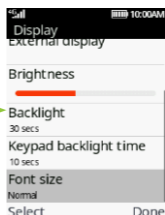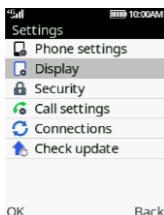

## 4.2 Adjust the display brighter

You can adjust the brightness of the display.

  1. Press **Menu > Settings > Display > Brightness**.
2. Adjust the brightness by using the left and right navigation keys and press the top right soft key when done.

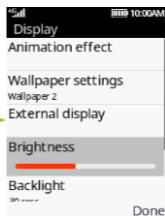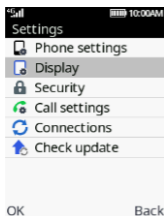



MobiWire

[www.mobiwire.com](http://www.mobiwire.com)